



BEAMZ
MADE
EAZY

150.585 V1

BBP93 UPLIGHT

QUICK **START GUIDE**

CONTROL MENU

MENU		DESCRIPTION
A001	001-512	DMX address setting
U-100	000-100	Battery level indicator
IRYE	IrYE	Wireless remote on (Yes) or off (No)
	Irno	
0255	000-255	Master dimmer, 0-100%
R255	000-255	Red dimmer, 0-100%
G255	000-255	Green dimmer, 0-100%
B255	000-255	Blue dimmer, 0-100%
U255	000-255	White dimmer, 0-100%
F255	010-255	Strobe, speed from slow to fast
CL01	01-08	Selectable static colours
CC01	00-99	Colour jump speed from slow to fast
DE01	00-99	Colour Gradual change from slow to fast
CP01	00-99	Colour pulse change from slow to fast
SUN9	0-9	Sound control sensitivity from fast to slow

DMX CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Master dimmer, 0-100%
2	Colour	000-255	Red, 0-100%
3		000-255	Green, 0-100%
4		000-255	Blue, 0-100%
5		000-255	White, 0-100%
6		Strobe	000-009
	010-255		Strobe from slow to fast
7	Macro	000-050	No function
		051-100	Colour selection
		101-150	Colour jumping
		151-200	Colour gradual change
		201-250	Colour pulse change
		251-255	Sound active mode

REMOTE CONTROLLER

BLACK OUT MODE

Press **<BLACK OUT>** off existing modes. Press **<BLACK OUT>** return the last modes.

AUTO MODE

Automatic mode will enable you to run the automatic programs on the product.

To turn on Automatic mode:

1. Press **<AUTO>** on the remote controller.
2. Press **<+>** or **<->** to choose between the different auto programs.

SOUND MODE

Sound-Active mode will enable the product to respond to the music.

To turn on Sound-Active mode:

1. Press **<SOUND>** on the remote controller.
2. Press **<+>** or **<->** to choose between the different sound programs.

STROBE MODE

To adjust the strobe speed of the automatic program and the sound active program.

1. Press **<STROBE>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.
3. Press **<STROBE>** again to turn off the strobe.

%

To activate the CC00 colour pulse mode:

1. Press **<%>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.

MANUAL

To activate the AU01 auto program mode:

1. Press **<MANUAL>** on the remote controller.
2. Press **<+>** or **<->** to choose between the different auto programs

FADE

To activate the EE00 colour gradual changing mode:

1. Press **<FADE>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.

R/G/B/W AND NUMBER 1~9



1. Press R/G/B/W or digit **<1>** to **<9>** to select one of pre program colours.
2. Press **<+>** or **<->** to either increase or decrease brightness






CAUTION! The remote control is supplied with a battery inserted. An insulating foil between the battery and the battery contacts prevents the battery from being discharged during storage. Prior to the first operation remove the foil from the battery support on the rear side of the remote control. Otherwise operation of the remote control is not possible.

If the range of the remote control decreases, replace the battery. For this purpose, on the rear side of the remote control press the small bar with the groove to the right (1) and at the same time remove the battery support (2).

For operation, one 3 V button cell type CR 2025 is required. When inserting, pay attention that the positive pole of the button cell shows upwards in the support.

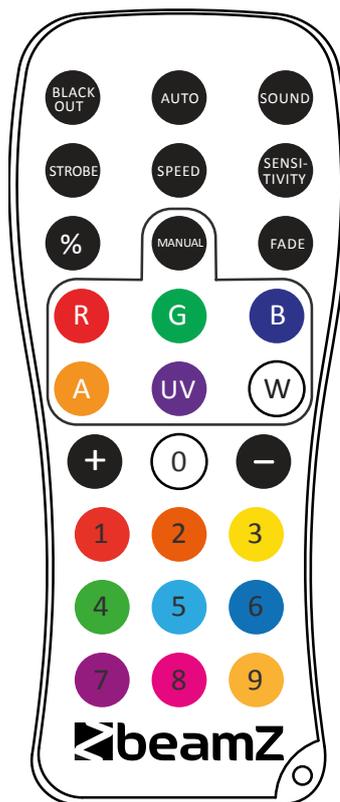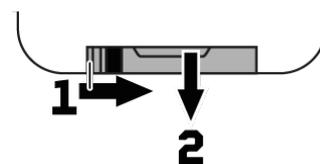

RJ45 TO DMX CABLE

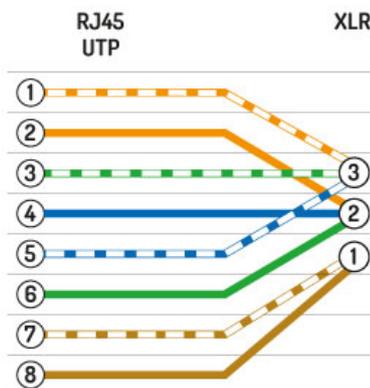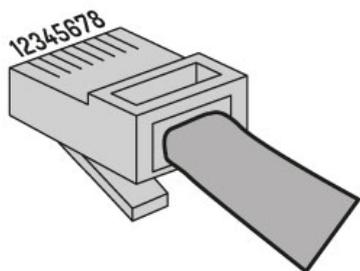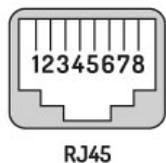



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

