



BEAMZ
MADE
EAZY

150.589 V2.1

BBP94

QUICK START GUIDE

REMOTE CONTROLLER

BLACK OUT MODE

Press **<BLACK OUT>** off existing modes. Press **<BLACK OUT>** return the last modes.

AUTO MODE

Automatic mode will enable you to run the automatic programs on the product.

To turn on Automatic mode:

1. Press **<AUTO>** on the remote controller.
2. Press **<+>** or **<->** to choose between the different auto programs.

SOUND MODE

Sound-Active mode will enable the product to respond to the music.

To turn on Sound-Active mode:

1. Press **<SOUND>** on the remote controller.
2. Press **<+>** or **<->** to choose between the different sound programs.

STROBE MODE

To adjust the strobe speed of the automatic program and the sound active program.

1. Press **<STROBE>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.
3. Press **<STROBE>** again to turn off the strobe.

SPEED MODE

To adjust the speed of the automatic program and the sound active program.

1. Press **<SPEED>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.

SENSITIVITY MODE

To adjust sound sensitivity for in Sound-Active mode

1. Press **<SENSITIVITY>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease sound sensitivity.

DMX / % MODE

To enable DMX or disallow DMX on the product.

Press **<DMX>** on the remote controller, the product work on the DMX controlling modes.

MANUAL MODE

1. Press **<MANUAL>** on the remote controller.

2. Press **<R>**, **<G>**, ****, **<W>**, **<A>** or **<UV>** (red, green, blue, white, amber or ultra violet) to choose your colour.

3. Press again **<R>**, **<G>**, ****, **<W>**, **<A>** or **<UV>** (red, green, blue, white, amber or ultra violet) to close your colour.

4. Press **<+>** or **<->** to either increase or decrease the percentage of each colour.

FADE/UNIT MODE


To adjust the FADE speed of the automatic program, the sound active program and the manual mode.

1. Press **<FADE>** on the remote controller.
2. Press **<FADE>** again to turn off the Fade mode.

NUMBER 1~9

To adjust the brightness value of the automatic program, the Sound active program and Manual Mode.

Press digit **<1>** to **<9>** to change different brightness on the device.

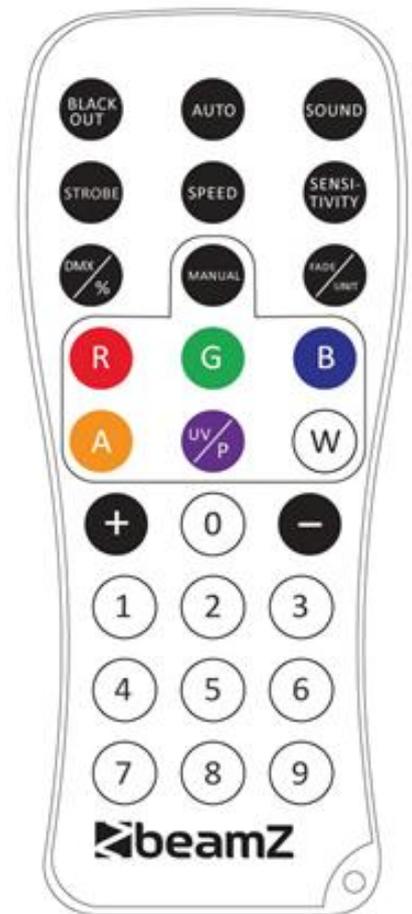

CONTROL MENU

MENU		DESCRIPTION
D001	001- 512	DMX512 address setting -6-channel mode
A001	001- 512	DMX512 address setting -10-channel mode
_XXX	000-100	Battery Level Indicator
S-SL	SL / FA	DMX512 dimming speed setting SL: slow dimming; FA: fast dimming
D-HO	Ho / oF	DMX signal loss processing mode setting
RFON	ON-OF	Wireless DMX control (not available on this item)
IRON	ON-OF	IR remote control
R255	000-255	Red dimming , from dark to bright
G255	000-255	Green dimming , from dark to bright
B255	000-255	Blue dimming , from dark to bright
U255	000-255	White dimming , from dark to bright
Y255	000-255	Amber dimming , from dark to bright
P255	000-255	UV dimming , from dark to bright
I255	000-255	IR remote control brightness
F000	000-255	Strobe, speed from slow to fast
CL01	000-255	15 kinds static colour selectable
CC15	00-15	Colour jumping, speed from slow to fast
DE15	00-15	Colour Gradual change, speed from slow to fast
CP15	00-15	Colour Pulse change, speed from slow to fast
SU15	00-15	Sound control
T 30	00-99	Current temperature

DMX CHANNELS

6 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Colour	000-255	Red dimmer from dark to bright
2		000-255	Green dimmer from dark to bright
3		000-255	Blue dimmer from dark to bright
4		000-255	White dimmer from dark to bright
5		000-255	Amber dimmer from dark to bright
6		000-255	UV dimmer from dark to bright

10 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Master dimmer	000-255	From dark to bright
2	Colour	000-255	Red dimmer from dark to bright
3		000-255	Green dimmer from dark to bright
4		000-255	Blue dimmer from dark to bright
5		000-255	White dimmer from dark to bright
6		000-255	Amber dimmer from dark to bright
7		000-255	UV dimmer from dark to bright
8	Strobe	000-004	No function
		005-255	Strobe from slow to fast
9	Program	000-050	No function
		051-100	15 kinds of colour output controlled by channel10
		101-150	Colour jumping
		151-200	Colour gradual change
		201-250	Colour pulse change
		251-255	Sound control
10	Program speed	000-255	Function speed from slow to fast



BEAMZ

**YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT**



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

